

PROPER CONNECTION OF WIRING ADAPTER TO MINI-ONBOARD RECEIVER

THE WIRING ADAPTER FOR LOCOMOTIVES WITHOUT A PLUG AND PLAY 12 PIN PLUG MAY ARRIVE ATTACHED TO THE RECEIVER (DIAGRAM 1). FOR PROPER FUNCTION, THE WIRING ADAPTER MUST BE REMOVED (SNAPPED OFF) FROM THE RECEIVER AND PLUGGED INTO THE 12 PIN MALE PLUG ON THE BOTTOM OF THE RECEIVER (DIAGRAM 2). THE ARROWHEADS ON THE WIRING ADAPTER AND RECEIVER MARK PIN 1. USE CARE TO INSURE THAT PIN 1 ON THE WIRING ADAPTER IS PLUGGED INTO PIN 1 OF THE 12 PIN PLUG ON THE RECEIVER.

