



CREST ELECTRONICS

www.crest-electronics.net

E-mail-crestelectronics2@yahoo.com

P. #. 201-565-6069


Fax-973-732-1410

QUICK START GUIDE FOR CRE57004S BASE STATION SET

This quick start guide manual shows you how to program the Base Station Transmitter and Receiver. The transmitter need three AA batteries which is not included the Base Station Set. To Link the transmitter and receiver turn '**ON**' the power on the Transmitter and Receiver.



ON/OFF
BUTTON

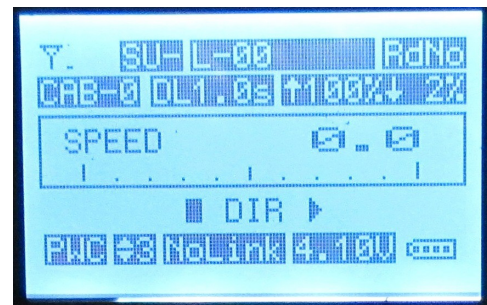


Press the **MENU** button on the transmitter and select '**1. ASSIGN FUNCTIONS**'. To select this function press **STOP/ENTER** button on the transmitter.





MENU


STOP
ENTER

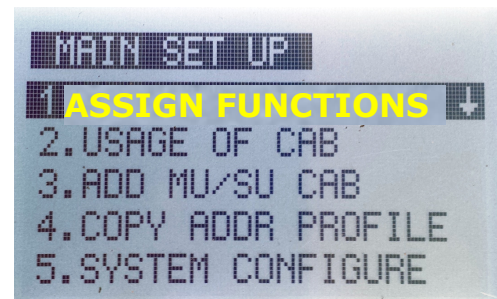



Under '1.ASSIGN FUNCTION' choose your '**LINK /BIND ADDRESS** (49)'. It's recommended to start with (**00**) as your first link address. To quickly get to link address (00) press the '**STOP/ENTER**' BUTTON. Press the bottom arrow to select Rx-Type then press the right arrow to select '**BASE RX**'

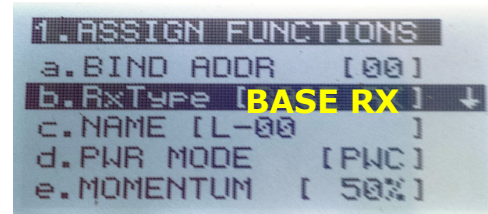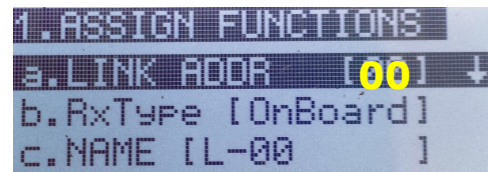



Press the 'bottom arrow' and scroll down to the '**LINKING**'.

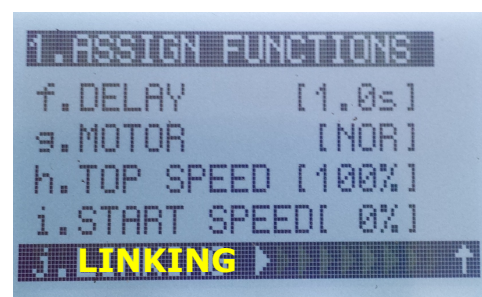


Press the Red Push button cord on the receiver or you can press the Red button directly at the corner of the receiver and the Blue LED on the receiver will flash brightly indicating the linking process has started. Release the button as soon as the Blue light starts to flash. Press the **Stop/Enter** button on the transmitter and the transmitter should indicate linking **Passed**.

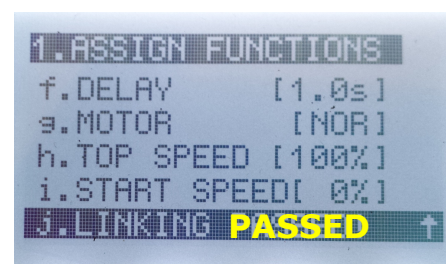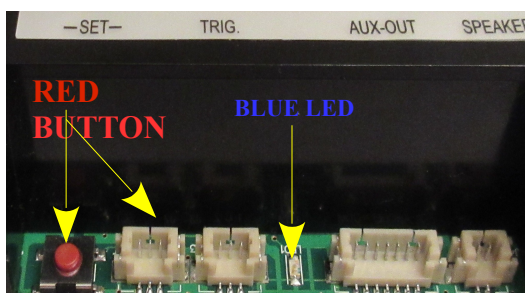

Press the MENU button once and scroll down to '**3. ADD MU/SU CAB**'. Press the **STOP/ENTER** button to select this function. Press the Left or Right arrow to select the cab number '**CAB NO: CAB-0**' to operate the locomotive/ layout. You can change the cab number to any open numbers you wish. Scroll down to '**SU [49]**', press the **STOP/ENTER** button and the Link address number will change to **[00]**.

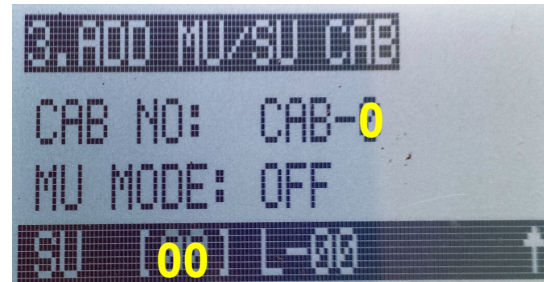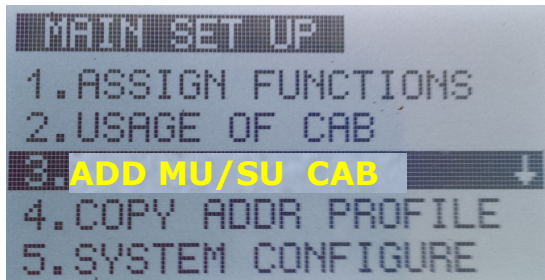

The linking process is finished press the Menu button twice to get back to the main screen. At the bottom of the main screen it should show up '**LINK OK**'.

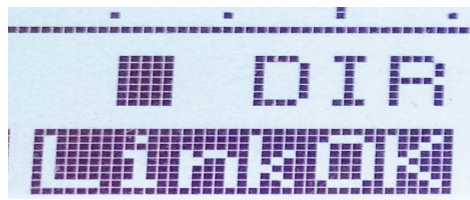

For more info on the Base Station visit the above web site and under support look for CRE57005S Manual .

To operate the locomotive on your layout press the Fast button on the transmitter and your locomotive will starts to move.

Note: A default (49) will show on the Link / Bind address also SU. To change the numbers to '00' press the Stop/Enter button to bring the number down to the (00) designation. It's recommended to start your layout/ locomotive by choosing your CAB -0 and Link Address 00. Refer to the manual on the CD for more info.

If the Transmitter shows an overload or overheat signal on the LCD, make sure there are no shorts the track or locomotive. When all is cleared press the "0 all stop" button to reset this function.

When the RED button is pressed and solid blue light is on the receiver turn off the power on the power supply and turn it back on to reset the linking process.