


# HOW TO INSTALL THE SMOKE CONTROL BOARD CRE 57073 IN THE C-16 TENDER

1) CUT SMOKE WIRE 1

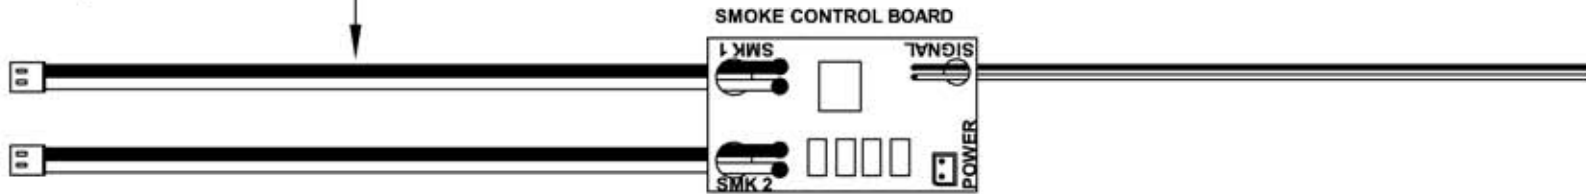

2) REMOVE FOUR SCREWS AT THE BOTTOM OF THE TENDER SHELL

3) REMOVE THE TENDER SHELL FROM THE CHASSIS

4) UNSOLDER SMOKE WIRES 7 AND 8 MARK 'X' ON THE MAIN PC BOARD

